

How to use the pay & display machine

Pay by cash

1. Press **GREEN** button to wake machine.

2. Insert coins

CHECK AMOUNT SHOWN ON SCREEN IS CORRECT. If incorrect, press **RED** button to reject coins and cancel the transaction.

3. Press **GREEN** button to purchase ticket.

No change is given from machines.

Pay by card

1. Press **GREEN** button to wake machine.

2. Press “Select Fee”

3. Select correct value for the required duration. Press “Card Step” button for more time if required. Press **GREEN** button to purchase ticket.

4. Confirm if you require a receipt by pressing “Yes” or “No” button.

5. Once the reader is ready, you can tap your card for contactless payment or insert card for chip & pin.